


1 How do I install my tiles?

- When installing Dynotile, always make sure the loop edges face the same direction.
- It is advisable to leave a 13mm gap between two adjacent edges and walls to accommodate tile expansion due to temperature variations.
- Wearing eye protection, Dynotile may be cut with a straight edge saw, mitre saw, or table saw.
- Dynotile is meant to be installed on a clean, flat, solid surface.
- Basic tools for installation include eye protection and a rubber mallet.


STEP 1

Start in one corner of the room. Align the tiles so that one of the flat edges faces the door opening just inside the door track. The other flat edge should follow the wall line as shown here.

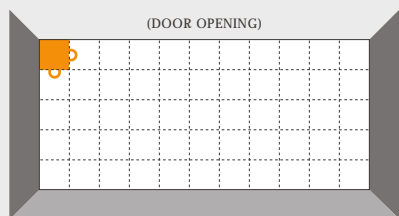


STEP 2

Align the tiles so that the pegs line up with the loops. Apply firm pressure downward toward the loop edge and the tiles will snap firmly into place (a rubber mallet may be used for this step). Lastly, always make sure the loop edges face the same direction.

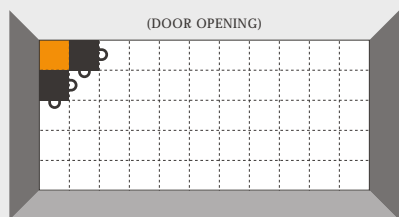


STEP 3

Proceed to snap the tiles into place along the two edges of your room until the two perimeter edges are complete. Trim the remaining tiles as needed.

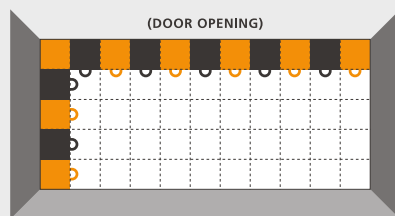


STEP 4

Continue to lock your tiles into place adding one row at a time. Remember to keep working in the same direction until your floor is complete.

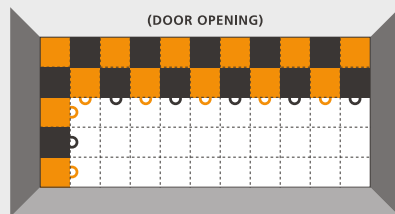

STEP 5

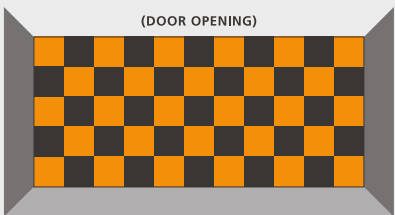


The final step is to install the edging across the door opening. Congratulations! You now have a great looking floor that will last for years to come.






Installation Questions:

If you have any installation questions please call call us on 01676 523386 or visit www.dynotile.co.uk




2 How many tiles do I need?

Typical Garage Size	No. of Dynotiles
 (2.74m x 5.48m)	162
 (5.48m x 5.48m)	324
 (8.22m x 5.48m)	486

3 How many edge pieces?

Garage Size	No. of Female Edge Pieces
 (2.74m x 5.48m)	9
 (5.48m x 5.48m)	18
 (8.22m x 5.48m)	27

4 How long will it take?

Installation Time Chart	Hours (1 person)
 (One Car Garage)	2
	4
	6

5 Need more information?

To find exact calculations of tile numbers and to see available colours please utilise the Dynotile Floor Builder found at www.dynotile.co.uk.

6 Is there a warranty?

Dynotile has a 12 year limited warranty for our interlocking plastic floor systems which applies to any damaged tiles resulting from defects in workmanship and material. This warranty is for a period of 12 years from the date of original purchase by the original purchaser, accompanied by the dated original receipt of purchase of the Dynotile product. Dynotile eligible for coverage by warranty will be replaced at either no charge or a prorated price as outlined in the Dynotile full warranty. Please contact Dynotile for a copy of the complete warranty.




7 How do I clean my floors?

Dynotile is easy to keep clean. To maintain a clean Dynotile floor regularly sweep with a bristled broom. For more aggressive cleaning Dynotile may be mopped with warm water and a mild soap or degreaser.

©2005 Copyright by Innovative Material Handling, Inc. All rights reserved. Dynotile is a registered trademark of Innovative Material Handling, Inc. Seattle, Washington.



Sole UK Distributor
Rockwell Sheet Sales Limited
Rockwell House
Birmingham Road
Millisons Wood
Coventry, CV5 9AZ
Tel: 01676 523386
www.dynotile.co.uk

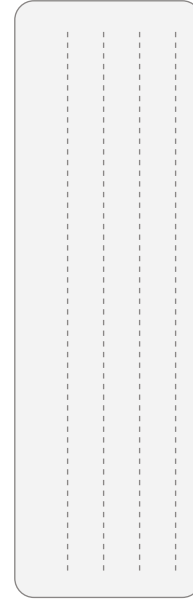

Installation Instructions and Warranty



Smart Floors for Demanding Spaces™